

BEST AVAILABLE COPY

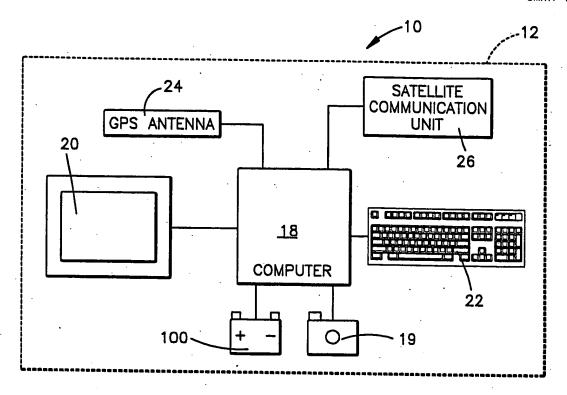


Fig.2




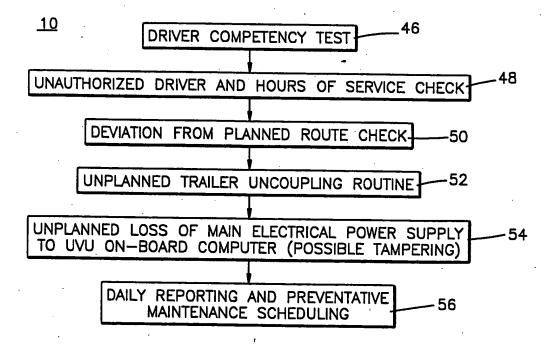



Fig.6

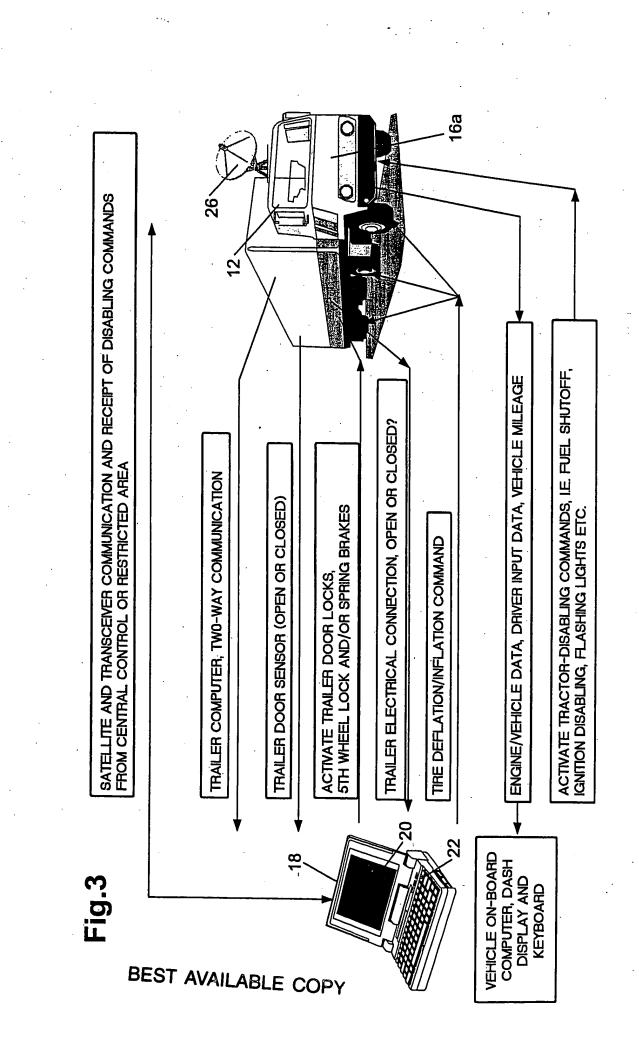

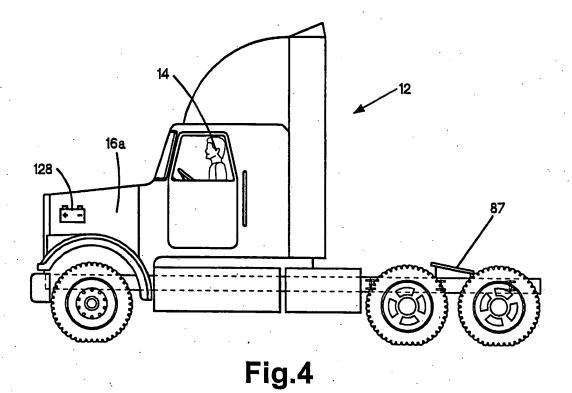


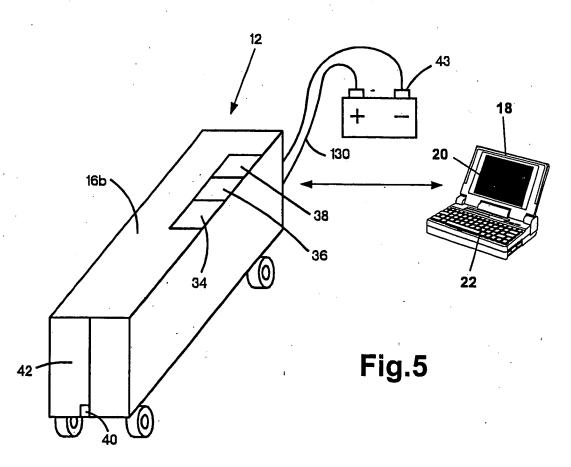



BEST AVAILABLE COPY

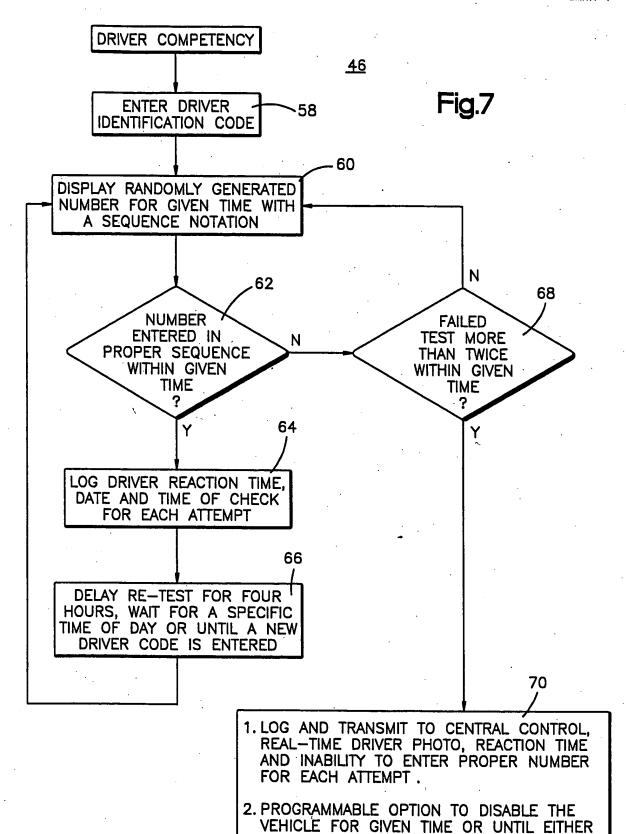


CENTRAL CONTROL PROVIDES AN OVERRIDE CODE OR A NEW DRIVER CODE IS ENTERED.

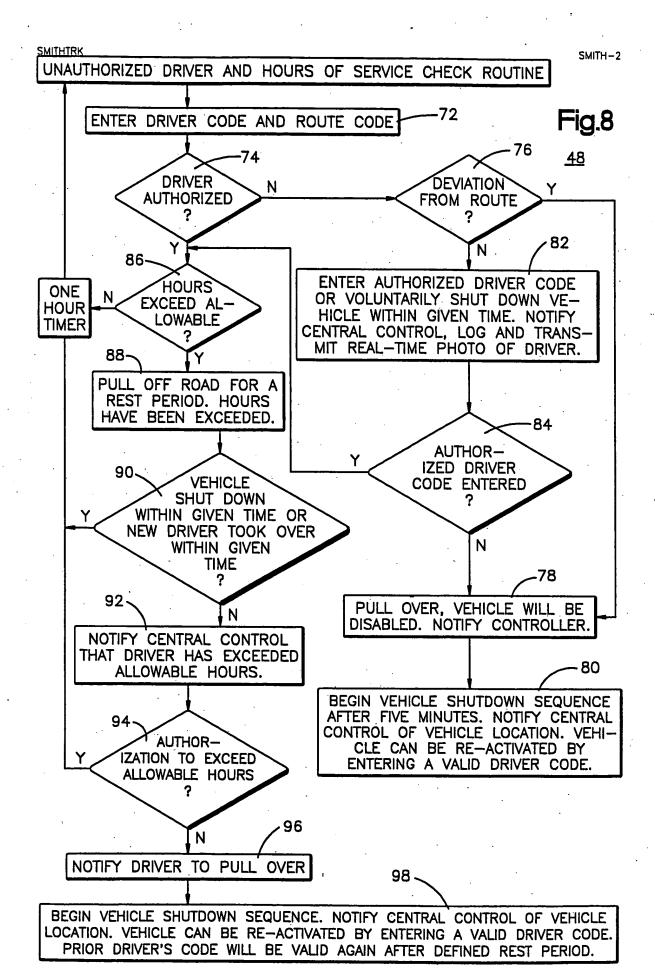


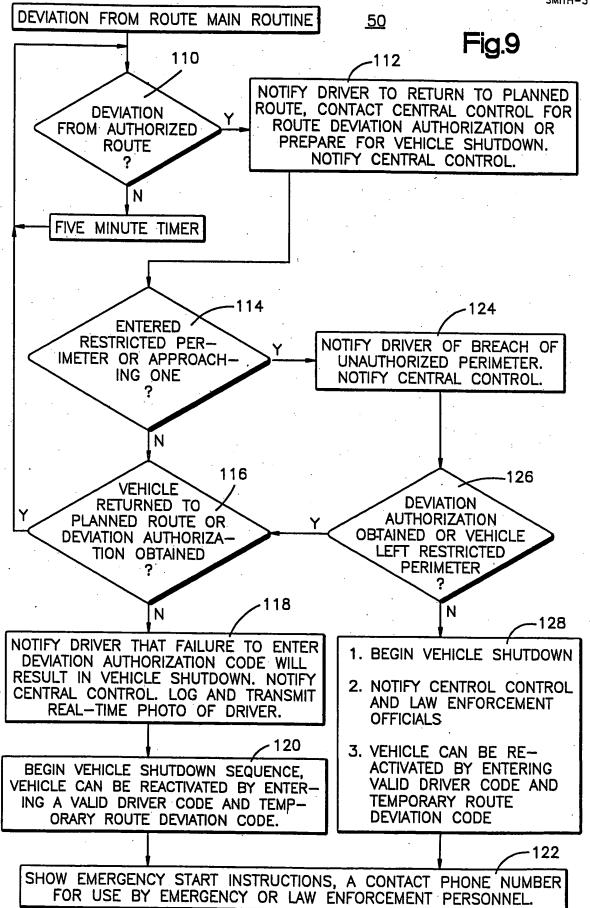

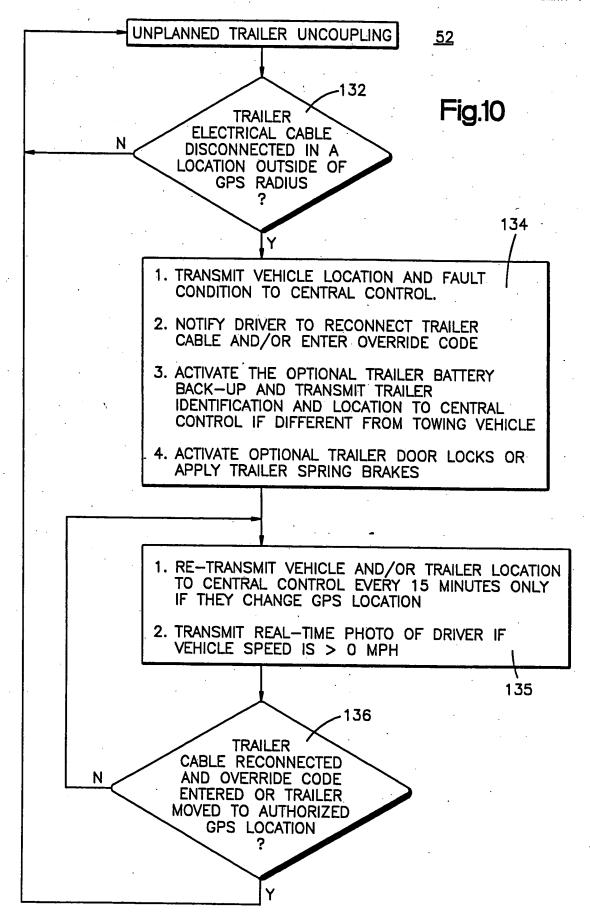

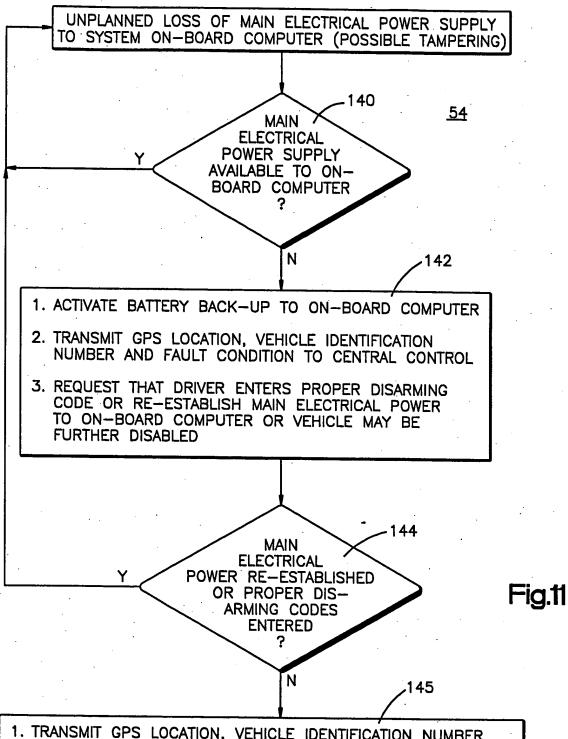

- 1. TRANSMIT GPS LOCATION, VEHICLE IDENTIFICATION NUMBER, REAL—TIME PHOTO OF DRIVER AND FAULT CONDITION TO CENTRAL CONTROL IF VEHICLE LOCATION CHANGES
- 2. IF THE VEHICLE OWNER HAS PROGRAMMED THE DISABLING FEATURE, IT WILL NOW BE ACTIVATED
- 3. SYSTEM CAN BE RESET BY RE-ESTABLISHING UVU COMPUTER POWER OR OVER RIDDEN BY ENTERING DISARMING CODE

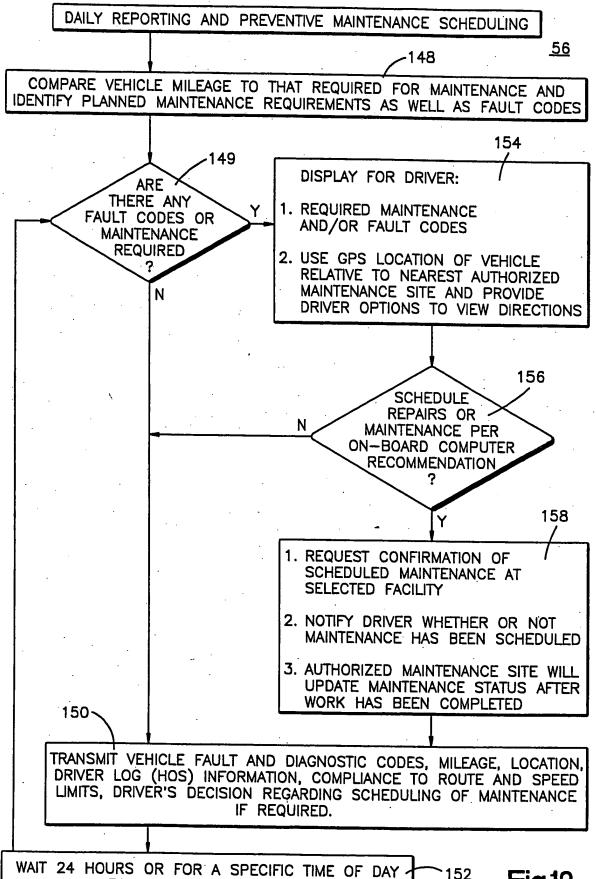

TO TRANSMIT INFORMATION

Fig.12